


Addendum to the Installation Manual

Accessing the Speaker Battery Compartments

There are two options to power your wireless speakers: using the included AC power adapters or using 8 C-cell batteries per speaker (not included). The Installation and Operation Manual takes you through the steps to do both on page 5.

The Installation and Operation Manual does not include instructions for accessing the battery compartment on each speaker.

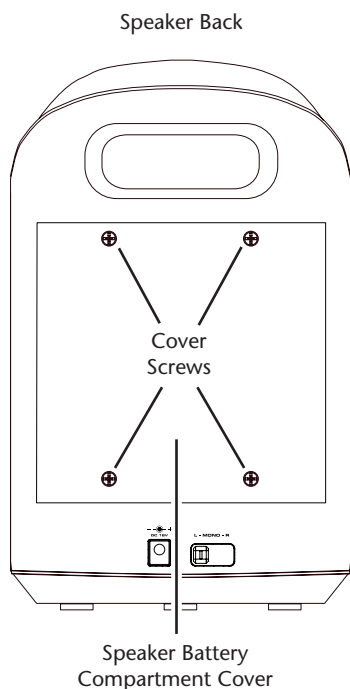

To remove a speaker battery compartment cover:

1. Lay the speaker gently on its front.
 2. Use a Phillips-head screwdriver to loosen the compartment cover screws.
 3. Hold the battery compartment cover and turn the speaker over. The screws should fall out. If they don't, lay the speaker on its front again and loosen the screws a little more.
- Important:** Don't lose the screws! You'll need them to put the battery compartment cover back on.
4. Put the speaker on its front again. Remove the battery compartment cover.
 5. Insert eight (8) C-cell batteries (not included) in the speaker following the polarity (+ and -) diagram inside the compartment.

To replace the speaker battery compartment cover:

1. Put the battery compartment back in place.
2. Put the screws back in the holes on the battery compartment cover. Use a Phillips-head screwdriver to tighten the compartment cover screws.